

GEOLINK ORIENTEER MWD

Actuator/ Pressure Switch Maintenance Manual

Issued to: Serial number: Version number: Date of issue:	
---	--

Copyright Geolink (UK) LTD.

This training manual is supplied in confidence and may not (1) be used for any purpose other than that of its supply, (2) be copied, reproduced or electronically stored by any means, or (3) be communicated to any other person or organisation without specific written permission from Geolink (UK) Ltd

Table of Contents

	<u>Pages</u>
1. Introduction	
1.1 Training Manual Objectives.....	1
1.2 General Description.....	1
1.3 Functional Description.....	1
2. Workshop Inspection and Test	
2.1 Electrical Resistance Checks.....	5
2.2 Testing the Actuator Pressure Switch Assembly.....	5
2.2.1 Testing the Pressure Switch using the Test Sleeve.....	5
2.2.2 Testing the Pressure Switch Installed in a Transmitter body.....	6
2.3 Analysing the Current Waveform of the Actuator Assembly.....	6
3. Assembly Maintenance	
3.1 Actuator/Pressure Switch Assembly Strip Down.....	9
3.2 Complete Pressure Switch Assembly Strip Down.....	12
3.3 Re-building the Pressure Switch Assembly.....	13
3.4 Re-building the Actuator Coil Assembly.....	14
4. Post Maintenance Checks.....	17
5. Post-Job Inspection and Test	
5.1 Transmitter Used Downhole.....	18
5.2 Transmitter Returned from Field in Unused Condition	18
6. Parts List.....	19

List of Figures

Section 1: Introduction

1-1 Transmitter Assembly.....	2
1-2 Actuator/Pressure Switch Assembly Detail.....	4

Section 2: Workshop Inspection and Test

2-1 Testing the Pressure Switch using the Pressure Switch Test Sleeve.....	6
2-2 Typical Current Waveforms.....	7
2-3 Sample Actuator/Pressure Switch Service Form.....	8

Section 3: Assembly Maintenance

3-1 Actuator/Pressure Switch Assembly Internals.....	10
3-2 Actuator/Pressure Switch Assembly Detail.....	11
3-3 Contact Housing Assembly.....	12
3-4 Contact Housing Assy Detail.....	13
3-5 Inserting the Pressure Switch Piston.....	13
3-6 Installing the Disc Springs Detail.....	14
3-7 Solder Wiring Diagram.....	15



Introduction

Workshop
Inspection and
Test

Assembly
Maintenance

Post Mainte-
ance Checks

Post Job
Inspection &
Test

Parts Lists

Contents

Introduction

Workshop
Inspection &
Test

Assembly
Maintenance

Post
Maintenance
Checks

Post-job
Inspection &
Test

Parts List

